


MAGNUMSTONE®

90° OUTSIDE CORNER INSTALLATION GUIDE


OVERHEAD WALL DETAIL:

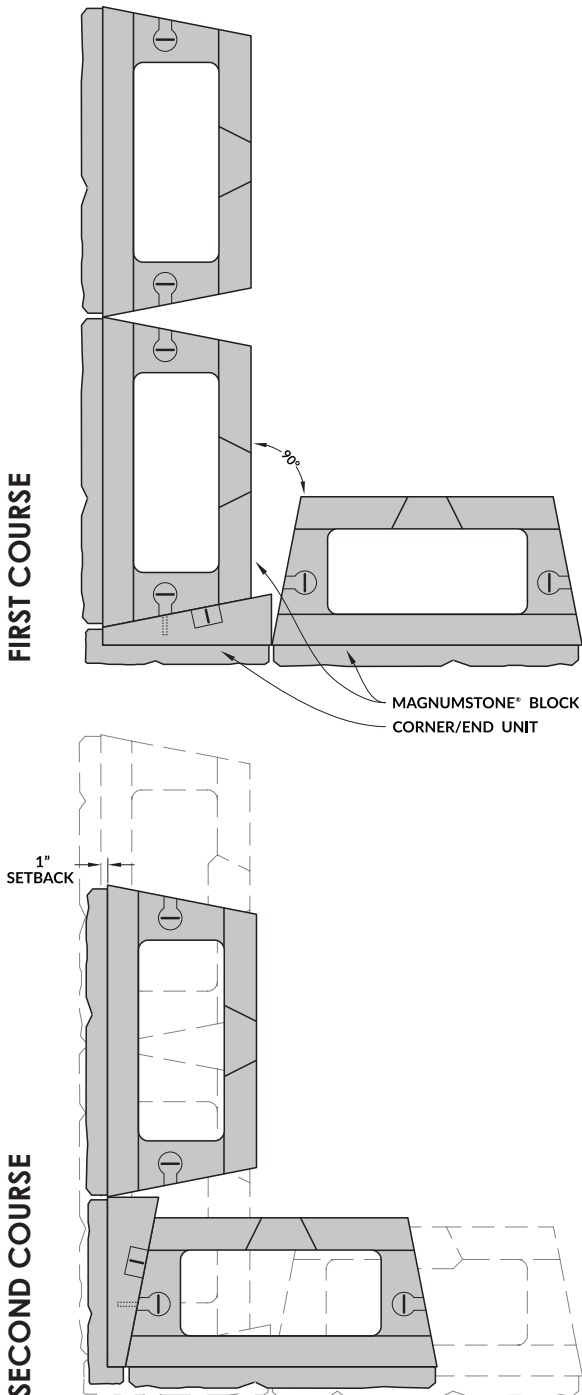

CORNER CONNECTION:



To mechanically connect the corner, place the End Corner into position on the wall. Put the steel plate on the bolt and the bolt through the MagnumStone's lifting hook. Run the bolt into the threaded insert on the End Corner with a 15/16" wrench (A ratcheting box wrench will speed up the process). As the bolt tightens, it will pull the steel plate snugly against the lifting hook and draw the End Corner tight to the Block. DO NOT over-tighten the bolt to avoid stripping the insert.

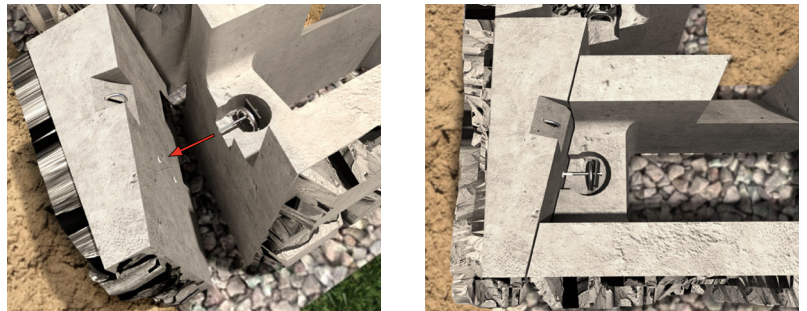

NOTES:

- This detail shows how to create a 90° outside corner on a MagnumStone® wall using an End Corner
- Corners are mechanically connected to each block with a Bolt and Steel Plate using a 15/16 or 24mm wrench
- A Steel Plate and Bolt are included with each End Corner
- DO NOT over-tighten the bolt
- The Universal End Corner can be used on both the left and right side of a wall
- The Half-High End Corner has a Left & Right (Select the required unit looking at the face of the wall)
- When installing, alternate the layers to stagger the bond.