



Where quality craftsmanship is a way of life...

# **CRAFTSMANSHIP**

in every detail

### Table of Contents



6-11	Commercial and Residential Applications	40-43	Southern Limestone
12-19	Weatherledge	44-45	Salvaged Wood Stone
20-25	Old County Ledge	46-47	Fieldstone
26-29	Pro Stack	48-49	Thin Veneer Brick
30-33	Ledgestone	50-57	Accessory Guide
34-37	Quarry Cut	58	Installation Guide
38-39	Dressed Ashlar	59	Warranty




## Manufactured Stone Veneer

VS Natural Quarried Stone Veneer


 Not weight bearing, no need for a footer or additional reinforcement and expansion joints

 Competitively priced to be well within budget constraints

Much larger variety of colors and shapes

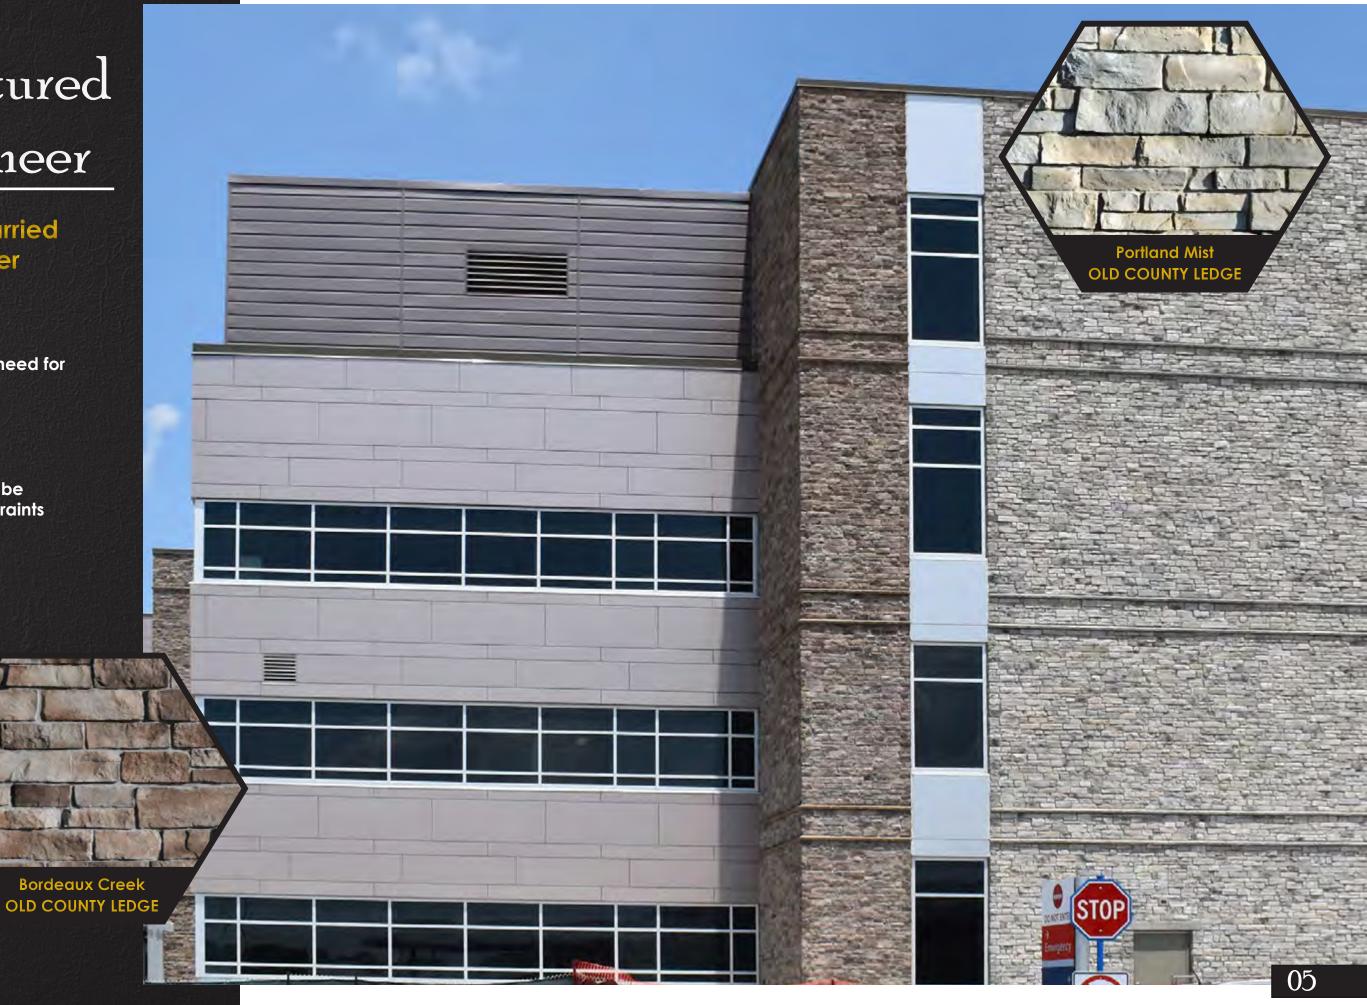

## Featured Commercial Applications

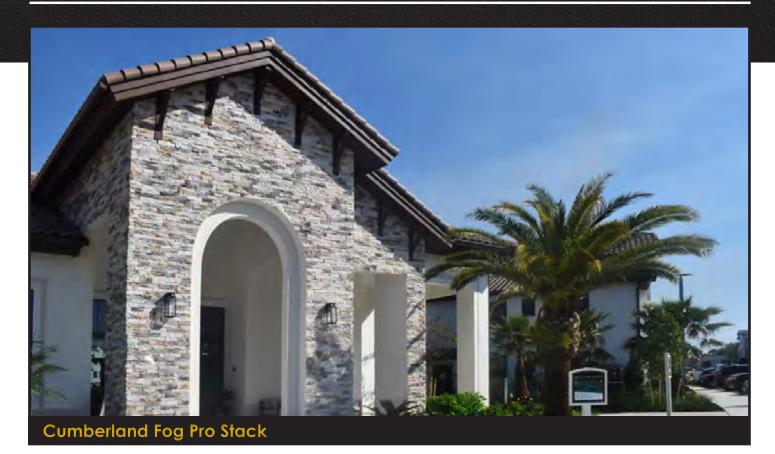










Portland Smoke Old County Ledge

## Featured Residential Applications

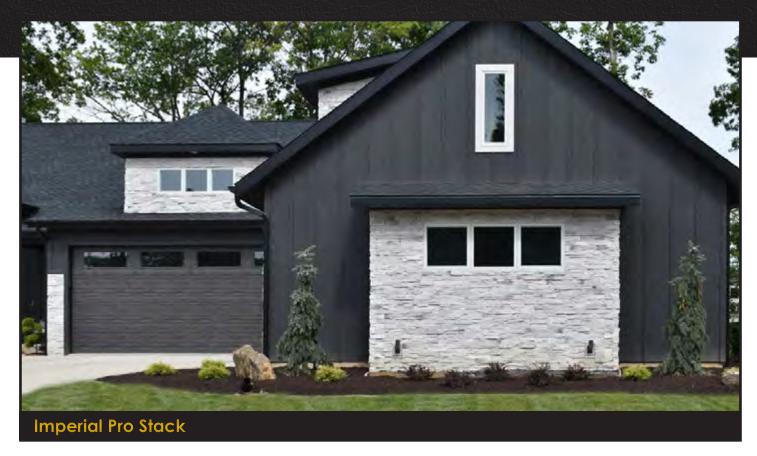



Sequoia Weatherledge






## Featured Residential Applications





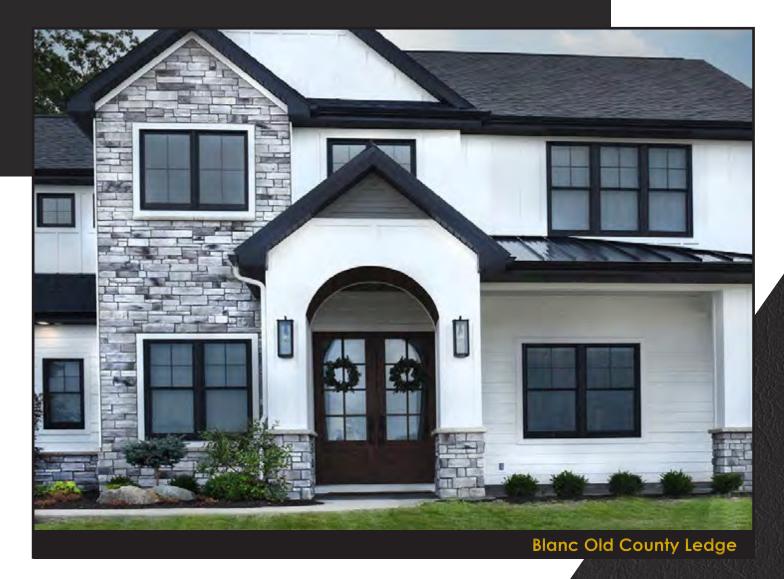







WEATHERLEDGE










**OLD COUNTY LEDGE** 



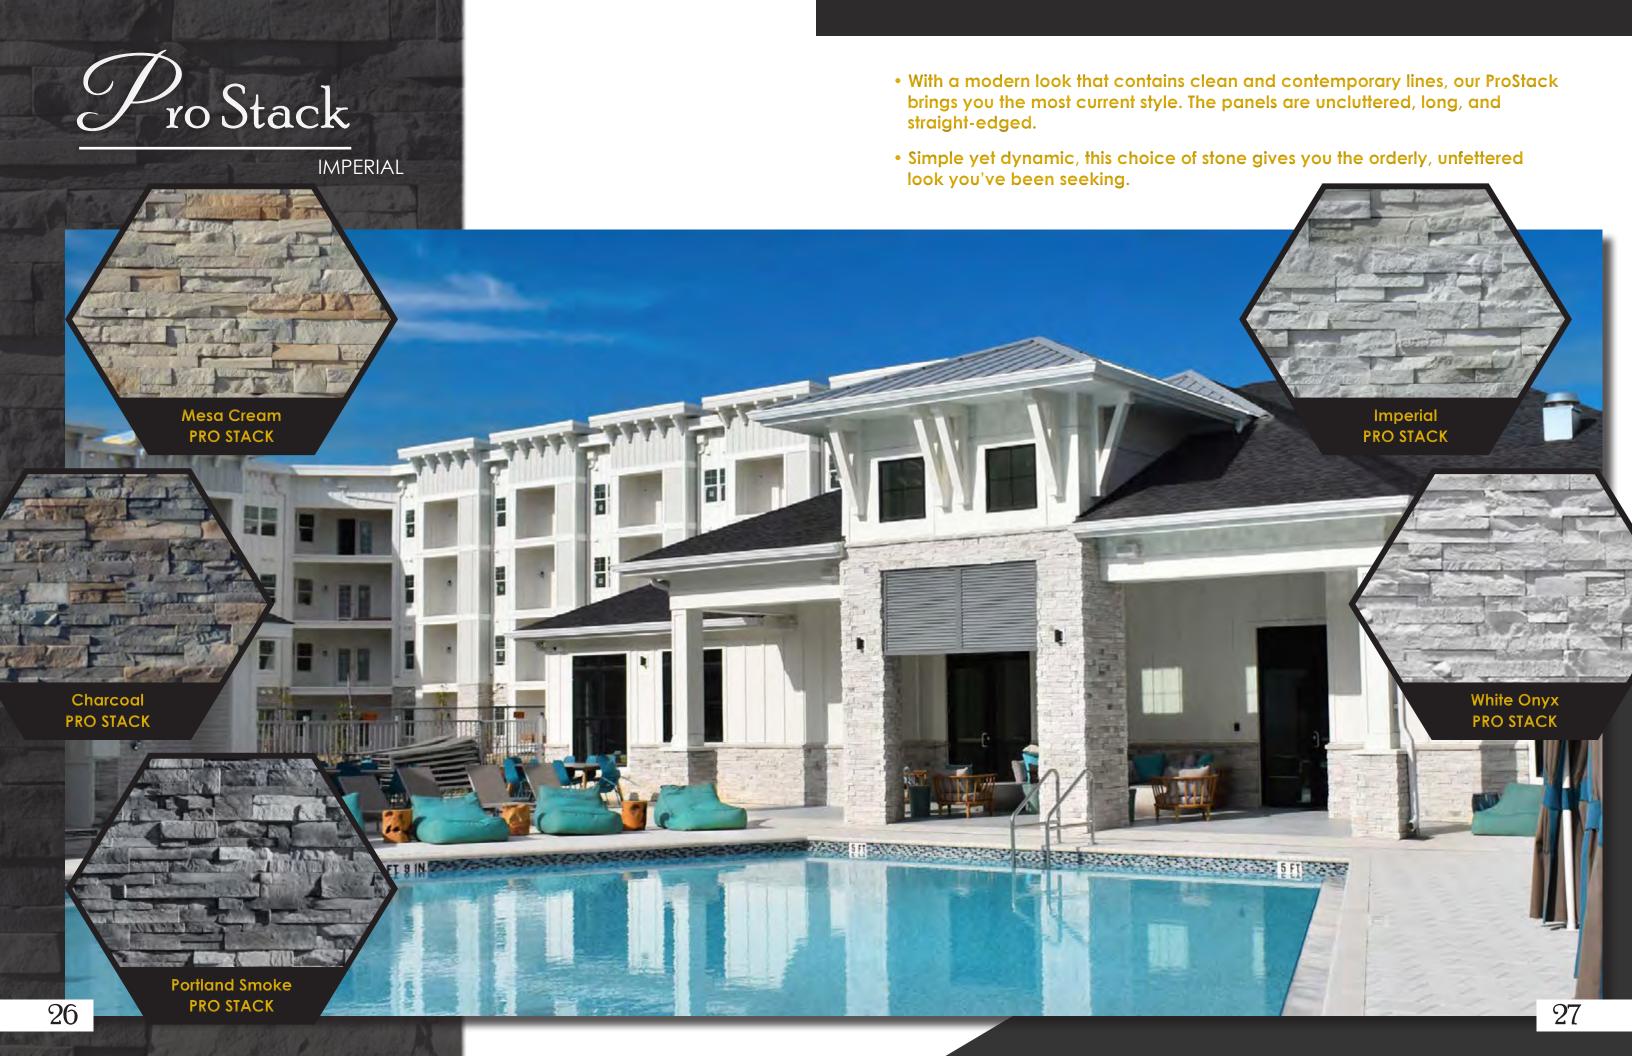











**QUARRY CUT** 








**SOUTHERN LIMESTONE** 

# Salvaged Wood Stone

- Minutely detailed, Salvaged Wood Stone brings a fresh line to your space with its weathered details. The striking reclaimed texture of this stone will give your project the finish that it deserves.
- Salvaged Wood Stone has the following included in the box: (Not sold by the individual piece) 3-8.5"x 32", 3-7"x 32", 1-8.5"x 20", 1-8.5"x12", 1-7"x 20", 1-7"x 12"






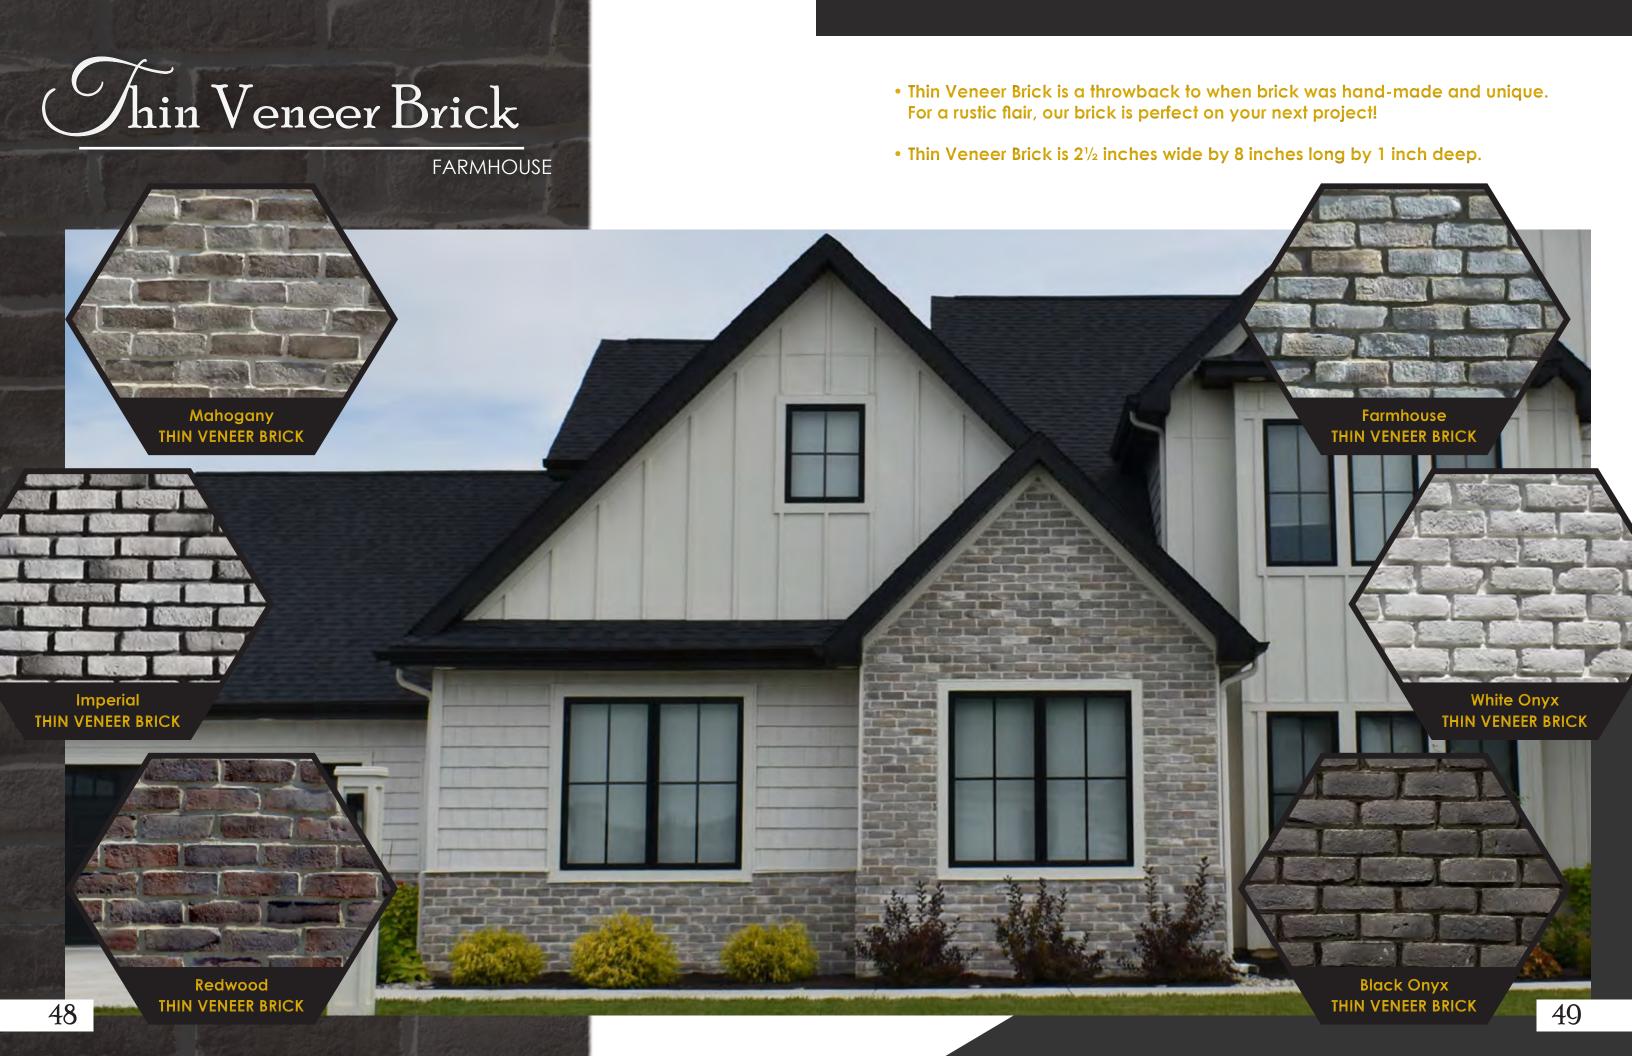


### Accessory Sizing Guide



#### **HEARTHSTONE**

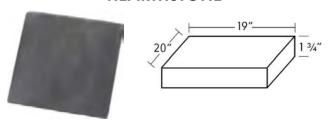


### RECEPTACLE BLOCK

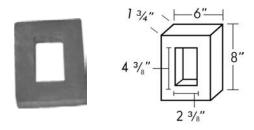


#### **ROCKFACE KEYSTONE**



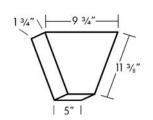

#### **ROWLOCK**







#### **WATERTABLE SILL**



#### **HYDRANT BLOCK**

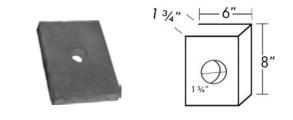


#### LIGHT BLOCK

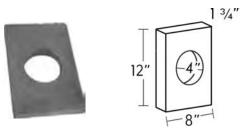


#### **AVAILABLE COLORS**




#### **WALL CAP**

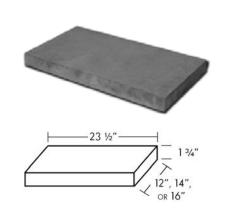

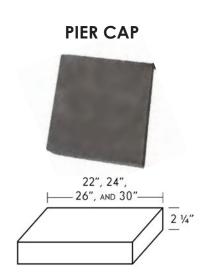

### **WINDOW TRIM**

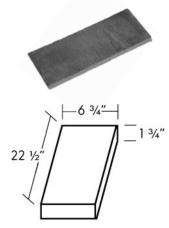


**AVAILABLE COLORS** 

Brown

Charcoal


Tan

Gray

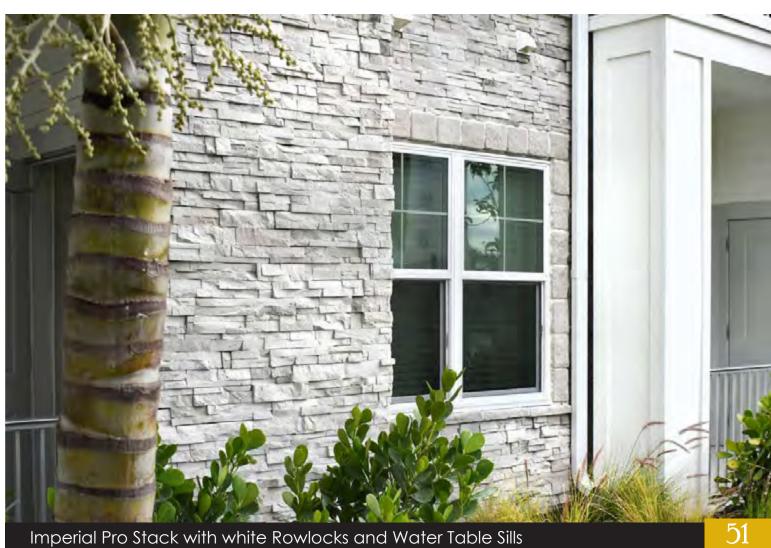

### Accessory Color Reference Guide



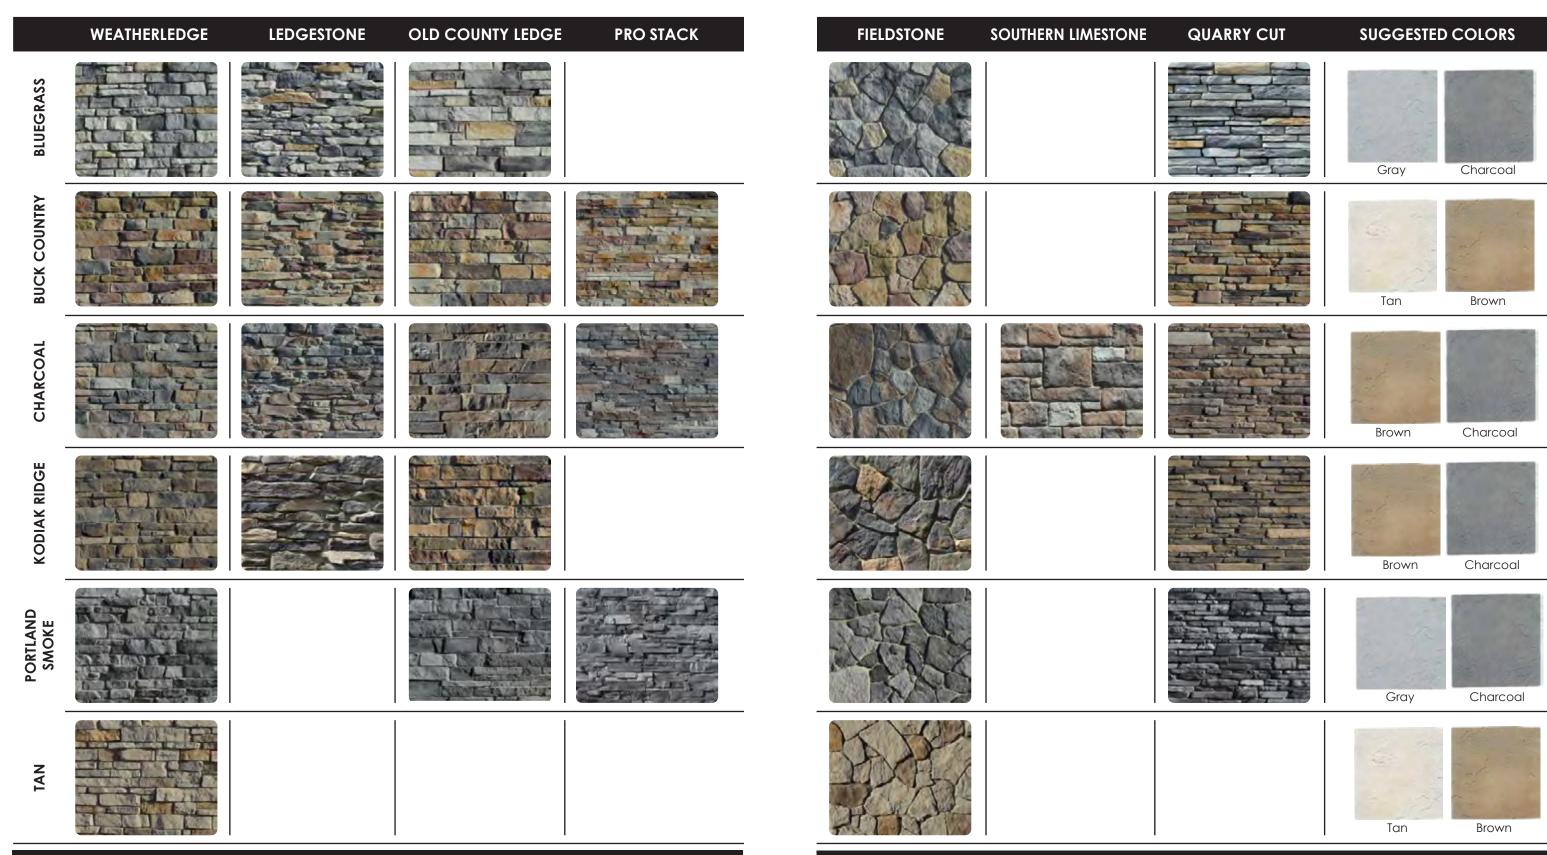


All colors listed here are for suggestion only and are solely at the discretion of the user.

For color, please reference stone samples or current installations for color representation.

### Accessory Color Reference Guide



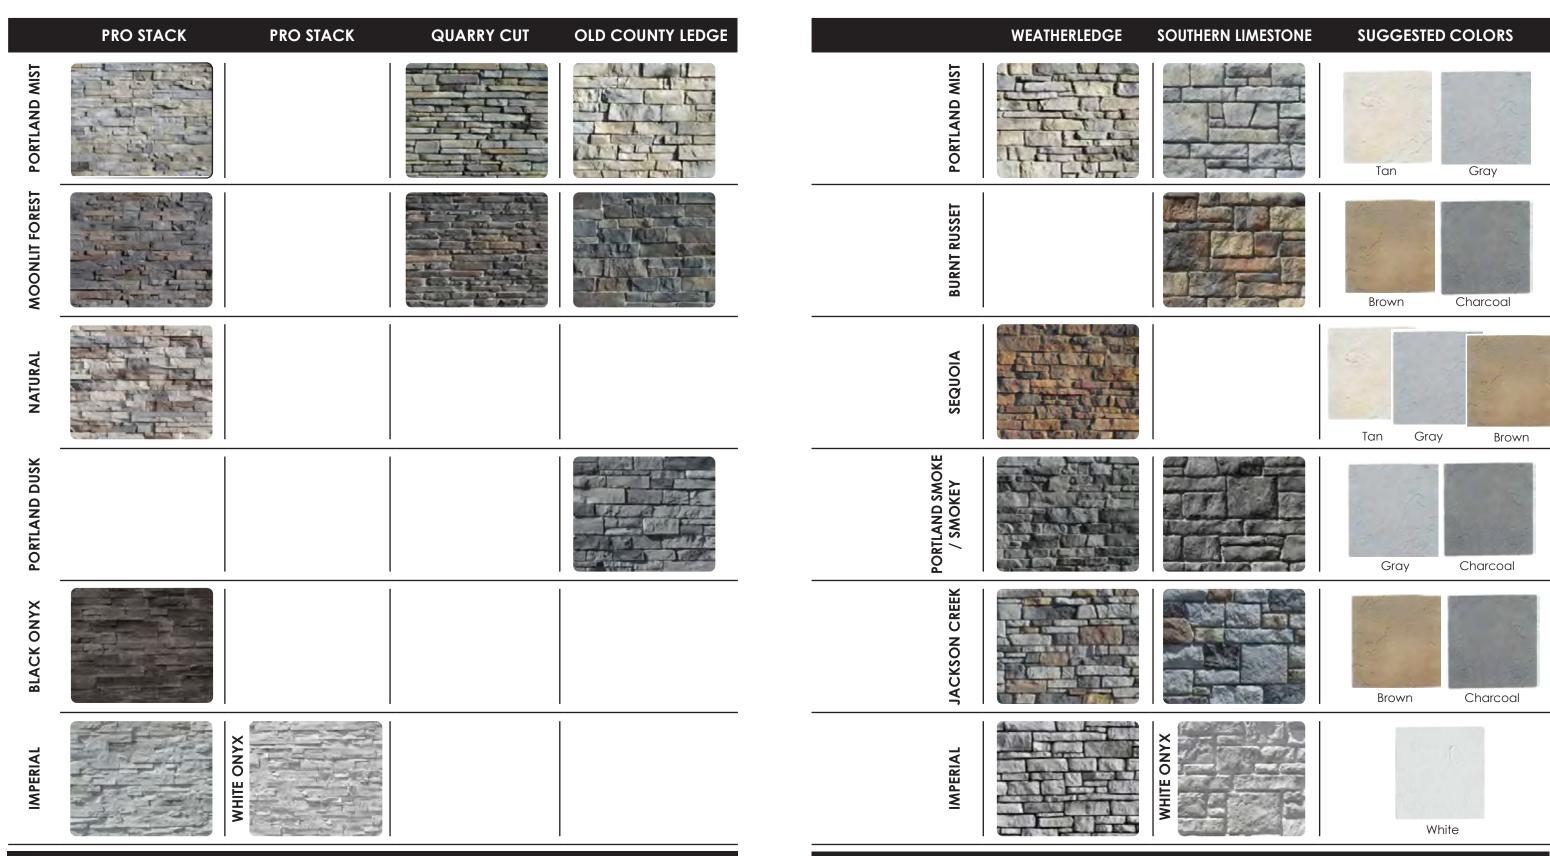


All colors listed here are for suggestion only and are solely at the discretion of the user.

For color, please reference stone samples or current installations for color representation.

54 55

### Accessory Color Reference Guide



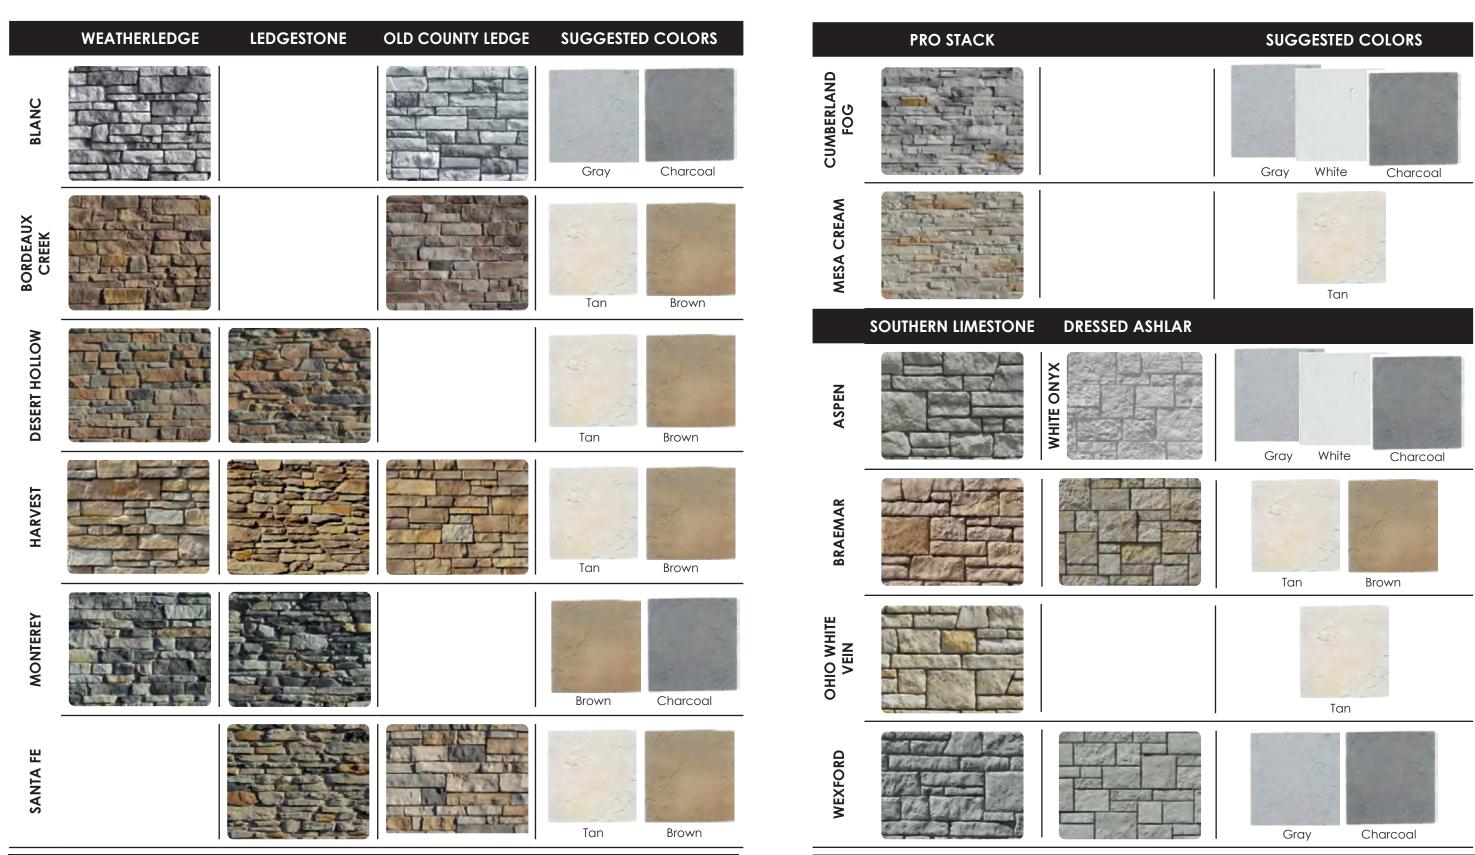

All colors listed here are for suggestion only and are solely at the discretion of the user.


For color, please reference stone samples or current installations for color representation.

### Installation Instructions


### Warranty Information



#### 1. INSTALLATION OVER WOOD FRAMING

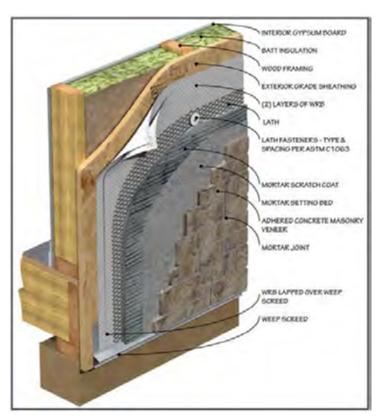

#### 2. INSTALLATION OVER CONCRETE **MASONRY UNITS**

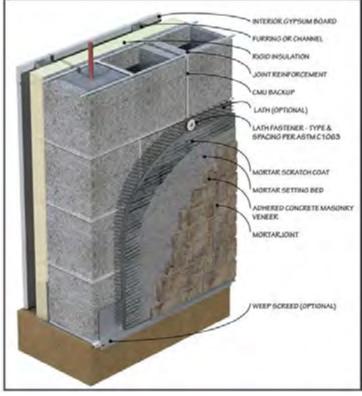

#### APPLYING THE METAL LATH

Apply a moisture barrier of housewrap and 30 pound felt. Overlap horizontal joints 5 inches and vertical joints 8 inches. All corners must be wrapped a minimum of 16 inches. Then apply 2.5 pound metal lath or equivalent. Metal lath must be overlapped in the same manner as the felt. Fasten with wide crown staples at least 1 inch in length. Make to wet down the back of the stone or the scratch coat. sure all chimneys and windows are properly flashed.

#### **APPLYING THE SCRATCH COAT**

Apply a scratch coat using Type M or Type N mortar, approximately 1/4 inch to 1/2 inch thick. Make sure the mortar is not too wet or too dry.

#### **APPLYING THE STONE**

Install corners first. Spread mortar evenly on the back of the stone, approximately ½ inch thick. When applying the stone to the wall, move the stone back and forth a little bit in a circular motion. Make sure your mortar is not too dry or too wet for proper bonding. In hot weather you may need

#### **GROUTING INSTRUCTIONS**

Use a grout bag to grout the joints, making sure you do not get cement on the face of the stone. Let the grout joint set up until it is slightly dry, then strike the joint with a jointer or other similar implement. Make sure it isn't too wet or too dry. If the mortar wets or stains a brush it is too wet. Brush out the joints with a soft brush.



Scan for the MVMA Installation Guide



- 50 year Limited Warranty from the date of purchase, when installed to Manufacturer's instructions and according to local building codes. Warranty does not cover damaged product resulting from building settlement, wall movement, improper installation, or discoloration due to airborne contaminants.
- The Contractor and Architect are responsible for proper installation. Prestige Stone Products, llc is not responsible for the structural wall surface it is applied to. Make sure to follow all of your local building codes. Building codes will vary from state to state, county to county.
- Warranty is subject to all other terms of the written warranty, a copy of which can be obtained from your dealer or by visitina:

#### www.prestigestoneproducts.com





9290 Winesburg Road Dundee, OH 44624 www.prestigestoneproducts.com 330.439.5318

