


VERSA-LOK®


STANDARD DOUBLE-FACE 90° CORNER GUIDE

LAYER DETAIL:

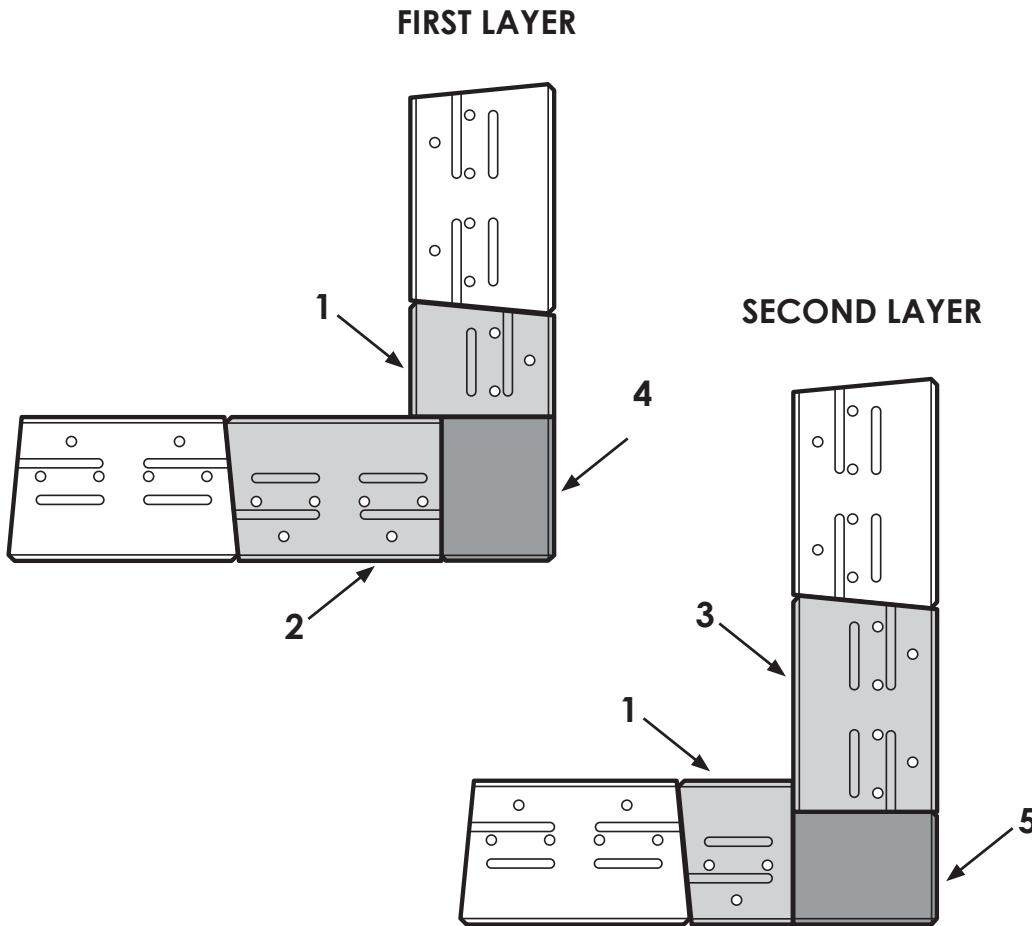


CUTS:


1 - Saw cut block in half

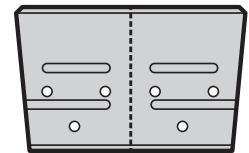

2 - Saw cut straight edge

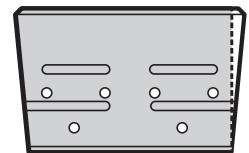

3 - Saw cut straight edge

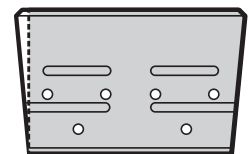

4 - Saw cut Full Return to 10"



5 - Saw cut Full Return to 10"



NOTES:

- This detail shows how to create a 90° corner on a Versa-Lok® Standard Double-Face wall using Full Return Corners and saw cut blocks.
- The right column shows the blocks you will need to cut to complete two layers.
 - When installing, alternate the layers to stagger the bond.
 - It is recommended the blocks are bonded with masonry adhesive.