



# VERSA-LOK®

## FULL RETURN OUTSIDE 90° CORNER GUIDE

FIRST LAYER

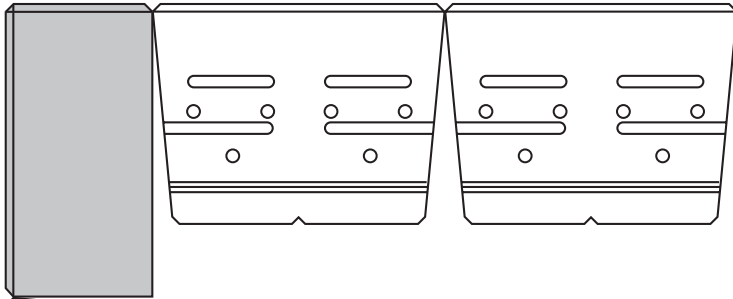

SECOND LAYER

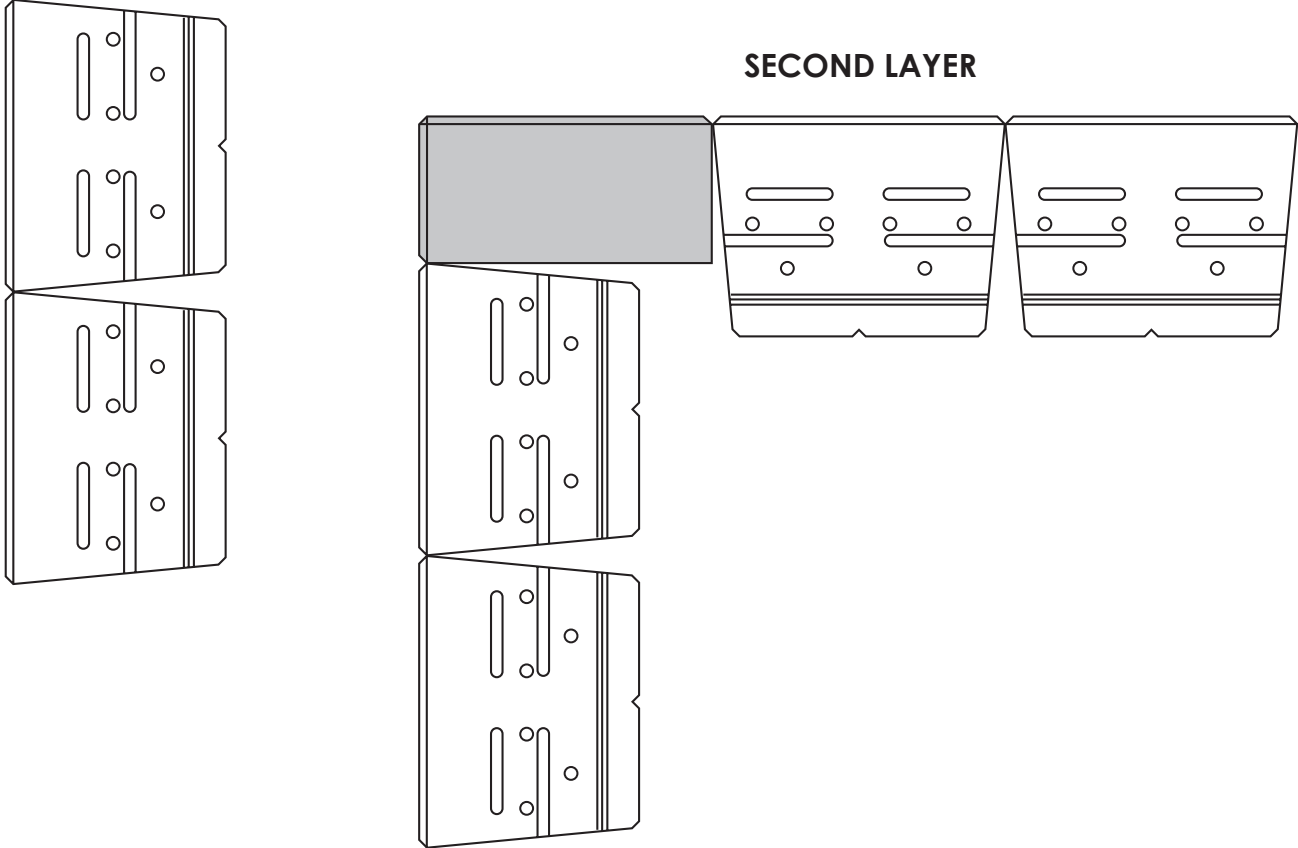

### NOTES:

- This detail shows how to create a 90° outside corner on a Versa-Lok® Standard wall using Full Return Corners
  - When installing, alternate the direction of the corner on each row  
This will allow you to stay on half bond without cutting blocks
  - The Full Return Corner Block in the diagram is shown in gray