



VERSA-LOK

HALF BOND OUTSIDE 90° CORNER GUIDE

FIRST LAYER

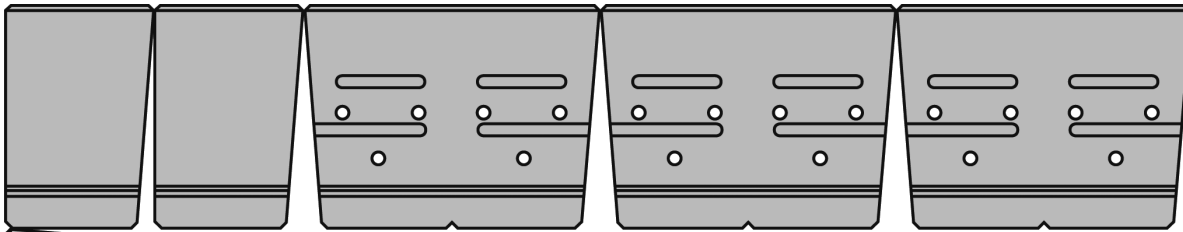

SECOND LAYER

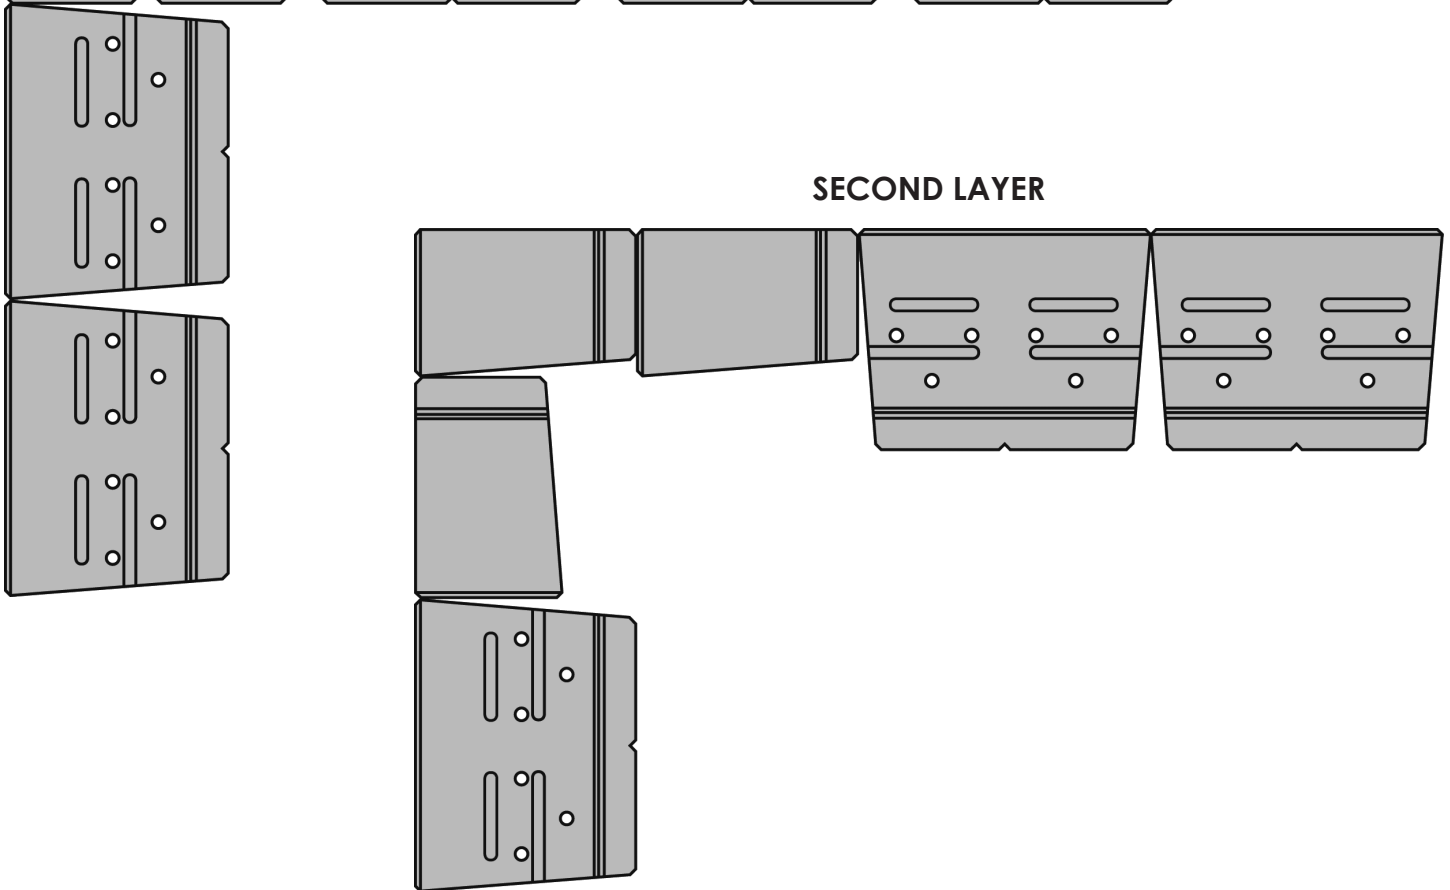

NOTES:

- This detail shows how to create a 90° outside corner on a Versa-Lok® Standard wall using Versa-Lok® Standard Solid Half block with "No Pins or Slots" on the corners
- This method maintains half bond and allows clean corners without using small split pieces